

T > +31 (0)85 060 58 49

E > info@ligcreate.com

I > www.liqcreate.com

## User's guide Liqcreate® Stone Coal Black

Liqcreate Stone Coal Black is an opaque high resolution general purpose photopolymer for SLA and DLP technologies in the range of 385 - 405nm. The polymer has an incredibly smooth surface finish which highlights the smallest details. Its rigid character makes this material perfectly suitable for rapid prototyping and product development in a wide variety of industries.

This User's Guide provides useful information to get the best experience from our product Liqcreate Stone Coal Black. This includes handling of the materials, safety and parameters for several 3D-printers.



#### Table of content

1.		Gene	eral information	1
2.		Resir	n Handling	1
			patibility 3D-printers	
			d parameters	
	4.	1.	Form2	2
	4.	2.	Miicraft 125y	3
5.		Post-	-processing	5
	5.	1.	Spill cleaning protocol	5
6.		Safet	ty	5
7.		Stora	age and transport	5
8.		Plast	tic and Packaging Waste	5

#### 1. General information

Ligcreate Stone Coal Black is one of our first resins in the general purpose photopolymer family. This User's Guide contains useful information to get started with this resin. The table below explains all signs on the label. Safety signs and instructions are mentioned in chapter 6.

# Label Signs Definition 250GR

Liquid waste and contaminated towels should be treated as chemical waste

Keep bottles and resin out of direct (sun) light

Resin and packaging should not be stored below 5°C or above 30°C for a longer period

This bottle contains 1000 grams or 250 grams of liquid resin when unused



This resin is designed to be printed at 25 to 100 micron layer thickness. More information on printing parameters is mentioned in chapter 4



Shake bottles properly before use.



This resin is designed to be printed on both SLA (laser based) and DLP (projection based) 3D-printers. Ideally within the range of 385-405nm

### 2. Resin Handling

Shake the bottle for at least 2 minutes before use. After shaking leave the resin to rest for 10 minutes to let air bubbles escape. The resin can be poured back into the bottle after use, our ligcreate scraper is the perfect tool for this. Check the resin for residual pieces of polymer before pouring back the resin in the bottle. Always use protective measurements when handling Ligcreate resins. Extended safety instructions can be found in chapter 6.

#### 3. Compatibility 3D-printers

Liqcreate Stone Coal Black is a photopolymer designed for SLA and DLP technologies in the range of 385 to 405nm. Several 3D-printers have pre-defined settings, explained in the next chapter. If your 3D-printer is not in this list, please contact our experts at info@liqcreate.com

#### 4. Build parameters


In this section the 3D-printing parameters of Liqcreate Stone Coal Black are described. Several 3D-printers are already compatible with Liqcreate Stone Coal Black, these include the Form2 and Miicraft125y machines. Contact our experts at <a href="mailto:info@liqcreate.com">info@liqcreate.com</a> for optimization on other 3D-printers.

#### 4.1. Form2

Set your machine in "Open Mode" by selecting "Settings" in the menu followed by enabling "Open Mode". Select one of the following settings for printing with Liqcreate Stone Coal Black on the Form2:

- Grey V3 25 micron
- Grey V3 50 micron
- Grey V3 100 micron

Standard Grey V3 support settings can be used to print with Liqcreate Stone Coal Black. Several features won't work in "Open Mode", this includes automatic filling, the wiper, heated resin tray and the machine stops every 100ml for a refill. Liqcreate Stone Coal Black can be printed in "Open Mode", even though these options are disabled.




Don't store Liqcreate Stone Coal Black in PDMS resin trays for extended periods. Resin trayd might swell and the PDMS will separate from the plastic bottom. This will not happen in high-quality resin trays.


#### 4.2. Miicraft 125y

First download the print parameter file from

www.liqcreate.com/support/technicaldocuments to use Liqcreate resins on the Miicraft 125y 3D-printer. Open MiiUtility, then go to print and click on the "Edit printing setting file" which can be found in "Step 3 Printing Settings. In "Edit printing setting file" you can import the Liqcreate parameter files for both 50 and 100 micron layer thickness.

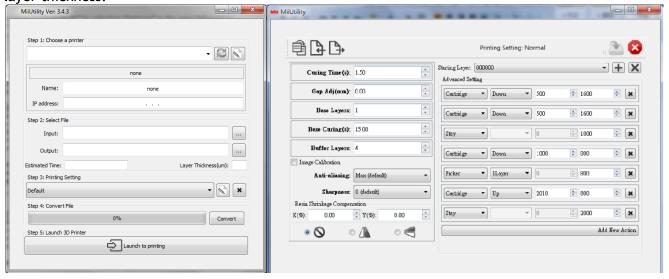


The last step is to modify the printers LED power. This can be done by entering the machine's IP-address in your browser or by clicking "Launch to printing" in the window above. The window below will appear.

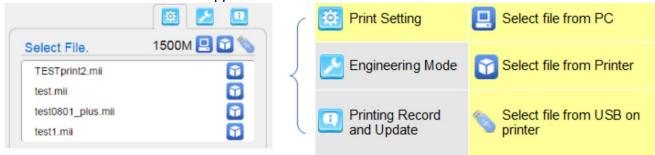

Select engineering Mode. This will activate the window on the next page.




Change the LED current to 3.5A. Note the current that was displayed before so you can change it back when needed. The software will often display 3.49A after saving.

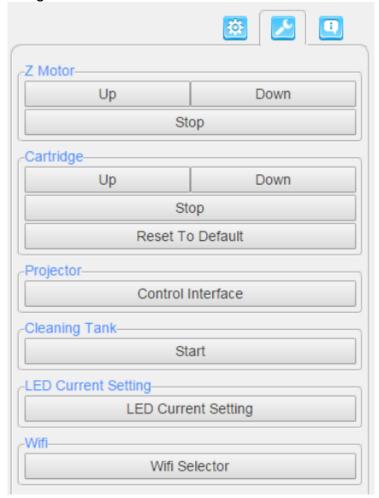

Now you are set to print with Liqcreate Stone Coal Black. Select the following settings when printing with Liqcreate Stone Coal Black:

- Ligcreate Stone Coal Black 50 micron
- Ligcreate Stone Coal Black 100 micron

It is important to modify the support settings before printing parts. For our black resin we advice the following support settings:



The high-quality Miicraft125 resin tank will cloud remarkably slower compared to the Form2 PDMS resin tank. The resin tank is also better resistance against Liqcreate resins, which makes it possible to store resins in a covered Miicraft125 resin tray for a month. Make sure that the film under the resin tray is in good condition before storing resins.

#### 5. Post-processing

Post-processing is advised to get the optimal properties out of your prints. This includes rinsing 5 minutes in IPA or (Bio) Ethanol, preferably ultrasonic or under agitation. Make sure the parts are dry before post-curing, this could be done by placing the parts in a well ventilated area for at least 30 minutes or use pressurized air for 2 minutes. The last step includes curing in a high-power UV curing chamber for 15 minutes at 65 degrees Celsius. Preferred wavelength of the curing unit should be between 300-410nm.

**Caution:** Green parts could break or crack if they are exposure to solvents (Bio)ethanol, IPA) for longer than 20 minutes.

**Caution**: Green parts need to be completely dry before post-curing. Curing wet and or sticky parts can lead to parts with surface defects.

Caution: Using a low-power curing unit can lead to inferior part properties Caution: Always use proper protection (Chapter 4). Parts are save to touch without gloves after proper post-curing.

#### 5.1. Spill cleaning protocol

Spilled resin can be cleaned with standard rinsing solvents like (Bio)Ethanol or IPA. Treat towels with resin as chemical waste.

#### 6. Safety

Liqcreate liquids and green parts should always be handled with care. Using the advised precautions like gloves, glasses and protective clothing. Dispose all safety items that have been in contact with liquid resin as chemical waste. Inform the Safety Data Sheet for more information.

#### 7. Storage and transport

Liqureate liquids should be stored in the original package in a dark and dry area between 5 and 30 degrees Celsius. Close the packaging after every use. For transport the liquids should not be exposed to temperatures above 60 degrees Celsius to ensure the expiry date.

#### 8. Plastic and Packaging Waste

Fully polymerized Liqcreate products can be treated as plastic waste and are not harmful for the environment. Liquid residue (washing solvent and contaminated papers included) should be treated as chemical waste and disposed as such.

Aluminum packaging can be cleaned by rinsing it with IPA or (Bio)Ethanol and disposed for recycling. Cardboard packaging should be disposed at a recycling point.